


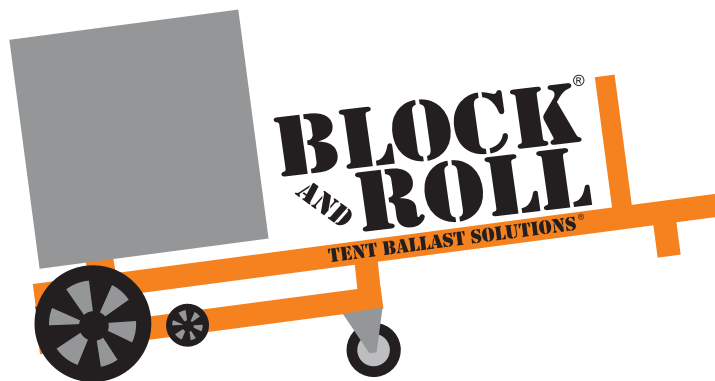

CB STACKER/CB STACKER PLUS BLOCK STACKER Instruction Manual



B&R INNOVATIONS, LLC

**999 S. Oyster Bay Rd, Ste. 401
Bethpage, NY 11714**


888-998-5739

WWW.BLOCKANDROLL.BIZ

For more
Instructional
Videos visit our
YouTube Channel

<http://www.youtube.com/blockandroll500>



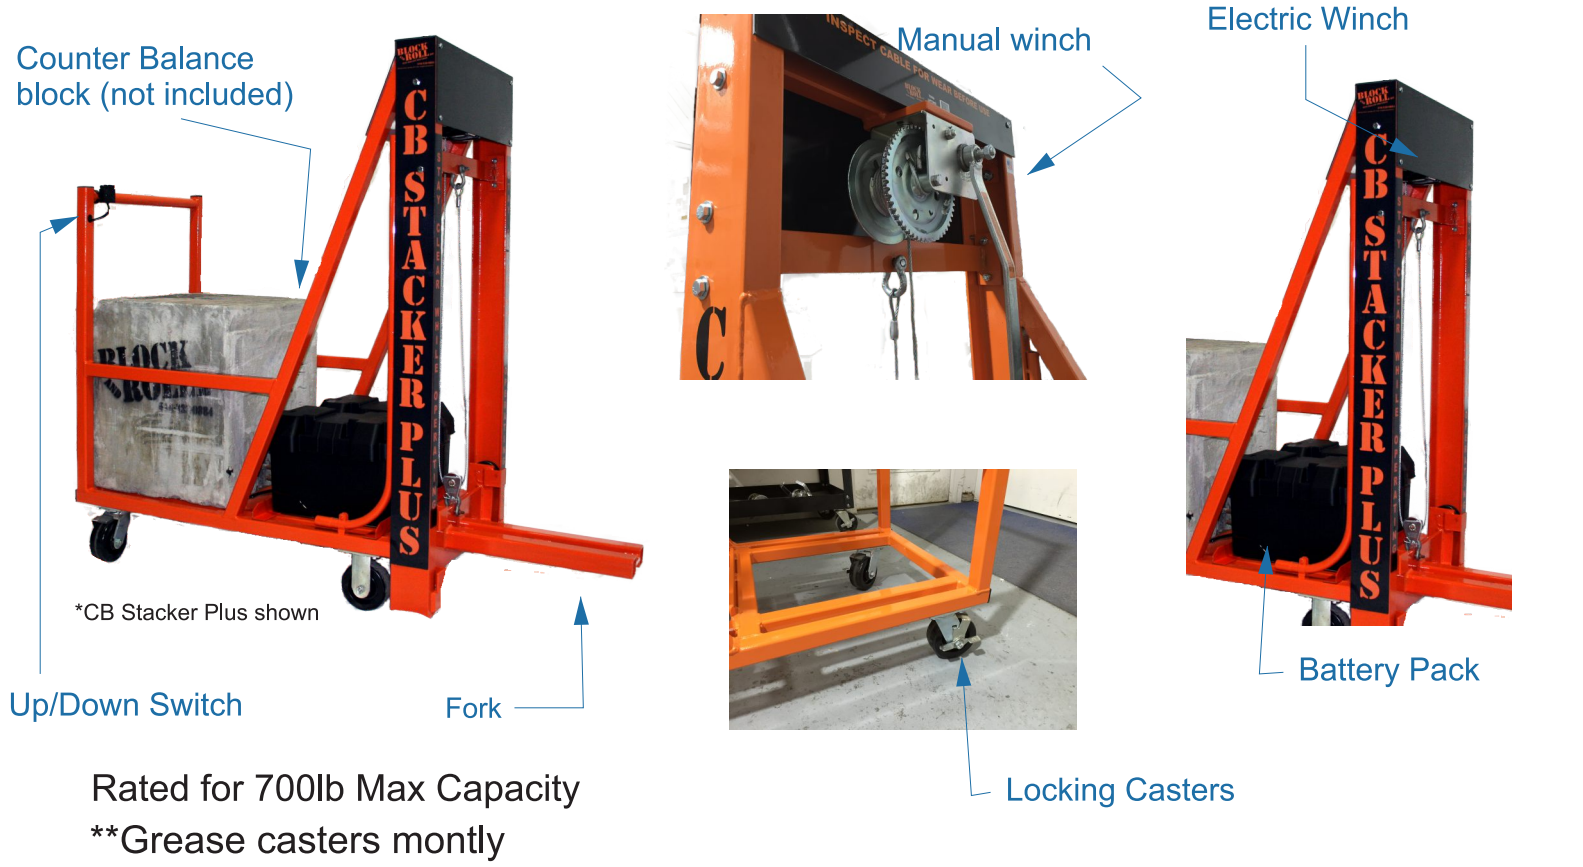

Rated for 700lb Max Capacity
 **Grease casters montly

Instructions:

Always inspect cable for wear prior to using either model of the CB Stacker. The CB Stacker/Plus must be used with an equal or greater block as counter balance. Cart may be transported without weight installed for easier movement. Counterbalance Block must be fully inserted into cart and not hang out the back, lock casters prior to loading or unloading block.

KEEP HANDS CLEAR OF CABLES AND WINCH MECHANISMS WHILE USING THIS CART. THIS CART IS NOT DESIGNED TO TRANSPORT BLOCKS. USE FOR STACKING ONLY. DO NOT ATTEMPT TO LIFT A BLOCK WITHOUT PROPER COUNTERBALANCE WEIGHT IN PLACE, SERIOUS INJURY CAN OCCUR. LOCK REAR CASTERS WHEN RAISING AND LOWERING A BLOCK, AND WHEN LOADING OR UNLOADING COUNTER BALANCE BLOCK AND WHEN CART IS NOT IN USE.

Place block to be stacked as close to the block you will be stacking on top of with your Mover Cart. Then with proper counterbalance block installed in the CB Stacker Cart insert fork into block to to be raised up. (make sure forks are inserted completely into block) For CB Stacker use manual winch to raise up the block. Press up button on CB Stacker Plus. Only raise block high enough to clear block to be stacked on. Once at the correct height push CB Stacker forward to place block over bottom block. Reverse manual winch handle to lower or press down button.

CHARGING: (CB STACKER PLUS ONLY)

Insert battery charger connector into matching connector on the battery pack. Plug in battery charger to 110v wall outlet. Allow 12-24 hours to charge battery.

⚠ WARNING	⚠ ADVERTENCIA	⚠ ADVERTISSEMENT
Do not operate or move with unstable loads Do not load beyond rated capacity DISTRIBUTE LOAD EVENLY DO NOT SIT OR RIDE	No utilice ni moverse con cargas inestables No cargue más allá de la capacidad nominal DISTRIBUIR carga uniformemente No se siente ni viaje en el carrito	Ne pas conduire ou déplacer des charges instables Ne chargez pas au-delà de la capacité nominale DISTRIBUER charge uniformément Ne pas s'asseoir ni monter sur le panier
B&R INNOVATIONS, LLC • Islandia, NY USA • Phone (888)-998-5739 • 516-338-0884 • info@blockandroll.biz • www.blockandroll.biz		

LIMITED WARRANTY

B&R Innovations, LLC (B&R) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from B&R or from an authorized distributor AND B&R has been fully paid.

What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

What is a "proper request"?

A request for warranty service is proper if B&R receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail, Fax or Email

B&R Innovations, LLC

Info@BandRinnovations.com

Fax: 917-677-8449

999 S. Oyster Bay Rd, Ste. 401

Bethpage, NY 11714

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After B&R receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, B&R may require you to send the entire product, or just the defective part or parts, to its facility in Bethpage, NY. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions ("wearing parts"), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for original components is 90 days. The warranty period begins on the date when B&R ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. B&R may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

If a defective part is covered by the warranty, what will B&R do to correct the problem?

B&R will provide an appropriate replacement for any covered part. An authorized representative of B&R will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive conditions;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Accidents involving the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from B&R. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

B&R makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.