



Fork Block Hoist INSTRUCTION MANUAL

MODEL: Block Hoist 6K
Optional Accessories Shown



Tether strap must be attached to the machine

⚠ WARNING	⚠ ADVERTENCIA	⚠ ADVERTISSEMENT
Do not operate or move with unstable loads Do not load beyond rated capacity DISTRIBUTE LOAD EVENLY Not for Overhead lifting Read instructions prior to use Securely Fasten to Forklift	No utilice ni moverse con cargas inestables No cargue más allá de la capacidad nominal DISTRIBUIR carga uniformemente No es para maniobras de elevación Lea las instrucciones antes de su uso Ajuste de manera segura a la carretilla	Ne pas conduire ou déplacer des charges instables Ne chargez pas au-delà de la capacité nominale DISTRIBUER charge uniformément Pas pour le levage aérien Lisez les instructions avant utilisation Fixer solidement aux chariots

Read Instruction manual prior to use

This device is designed for material lifting only.

Securely fasten to forklift

Check Forklift owners manual for forklift capacity and that attachment is a permitted use accessory by forklift manufacturer.

Do not exceed rated capacity

Failure to is a misuse of the product. If this product is used improperly or carelessly, the operator and/or bystanders might sustain serious personal injuries.

EVERY PERSON who installs, uses, or maintains this attachment must read and understand the instructions in this manual beforehand.

DO NOT attempt to resolve any problem with the attachment unless: 1) you are authorized to do so; AND 2) you are certain that it will be safe to use afterwards.

Inspect the attachment before each use if necessary to recall "Use instructions".

Always inspect the attachment before using it.

DO NOT use it unless it is in normal condition! If you observe any significant damage to any part of the attachment, immediately tag the unit "Out of Service".

DO NOT use the attachment until it is restored to normal condition.

DO NOT use the attachment to lift or move people, e.g. with a work platforms, or to drag material.

The lifting rigging must be fully retained within the hook's safety latch before lifting any load off the ground.

Make certain that the load is properly slung and balanced.

DO NOT leave an elevated load unattended. Lower the forks until the load is fully supported by the ground and disengage the load from the hoist hook before leaving it unattended.

DO NOT modify this product without written authorization from B&R Innovations. Unauthorized modifications might make the fork attachment unsafe to use and automatically voids the Limited Warranty.

DO NOT use the attachment to lift and move a load that is unstable when lifted with the Block Hoist.

ALWAYS apply the relevant lifting practices implemented at your work site.

DO NOT attempt to lift a load that weighs more than the rated load of the attachment or the lift truck, whichever is smaller.

DO NOT lift a load any higher than necessary to avoid contact with objects in the path of travel.

DO NOT raise a load over people or allow anyone to stand or reach beneath a suspended load.

Safety recommendations:

B&R Innovations strives to identify foreseeable hazards associated with the use of its products. However, material handling is dangerous and no manual can address every conceivable risk. The end-user ultimately is responsible for exercising sound judgment at all times.

Always wear OSHA recommended Safety gear related to task and machinery used.

NOTES:

1) Compliance with laws, regulations, codes, and non-voluntary standards enforced in the location where the product is used is exclusively the responsibility of the owner/end-user.

2) B&R Innovations is not liable for any injury or property damage that occurs as a consequence of failing to apply either: a) the instructions in this manual; or b) information provided on labels affixed to the product. Neither is B&R Innovations responsible for any consequential damages sustained as a result of failing to exercise sound judgment while assembling, installing, using or maintaining this product.

LIMITED WARRANTY

B&R Innovations, LLC (B&R) warrants this product to be free of defects in material and workmanship during the warranty period. Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.

Who may request service?

Only a warrantee may request service. You are a warrantee if you purchased the product from B&R or from an authorized distributor AND B&R has been fully paid.

What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

What is a “proper request”?

A request for warranty service is proper if B&R receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail, Fax or Email

B&R Innovations, LLC

Info@BandRinnovations.com

Fax: 917-677-8449

999 S. Oyster Bay Rd, Ste. 401

Bethpage, NY 11714

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After B&R receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, B&R may require you to send the entire product, or just the defective part or parts, to its facility in Bethpage, NY. The warranty covers defects in the following original dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in original parts that wear under normal usage conditions (“wearing parts”), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for original components is 90 days. The warranty period begins on the date when B&R ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. B&R may extend the warranty period for products shipped from authorized distributors by up to 30 days to account for shipping time.

If a defective part is covered by the warranty, what will B&R do to correct the problem?

B&R will provide an appropriate replacement for any covered part. An authorized representative of B&R will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:

Product misuse;

Negligent operation or repair;

Corrosion or use in corrosive conditions;

Inadequate or improper maintenance;

Damage sustained during shipping;

Accidents involving the product;

Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from B&R. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

B&R makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.