


LED HIGH BAY INSTRUCTIONS

Installation Instructions:

- 1- Assemble the fixture following the instructions in this sheet.
- 2- Attach hook to secure hanging device and lock with locking screw.
- 3- Attach supplied plug according to instructions. (End user must attach plug in order to maintain UL Listing)

Assembly Instructions:

- 1- Unscrew and separate Locking Ring from Rubber Gasket and E39 Lamp Socket(200w Max)
- 2- Place the socket assembly and rubber gasket on top of the Lamp Housing as shown and lock the assembly in place by screwing the locking ring from inside the Lamp Housing.
- 3-Screw in the lamp (clockwise) and ensure lamp is well seated. (Optional: place a small dab of non-conductive silicone on Lamp socket to the bulb to keep secure from vibration during transport)

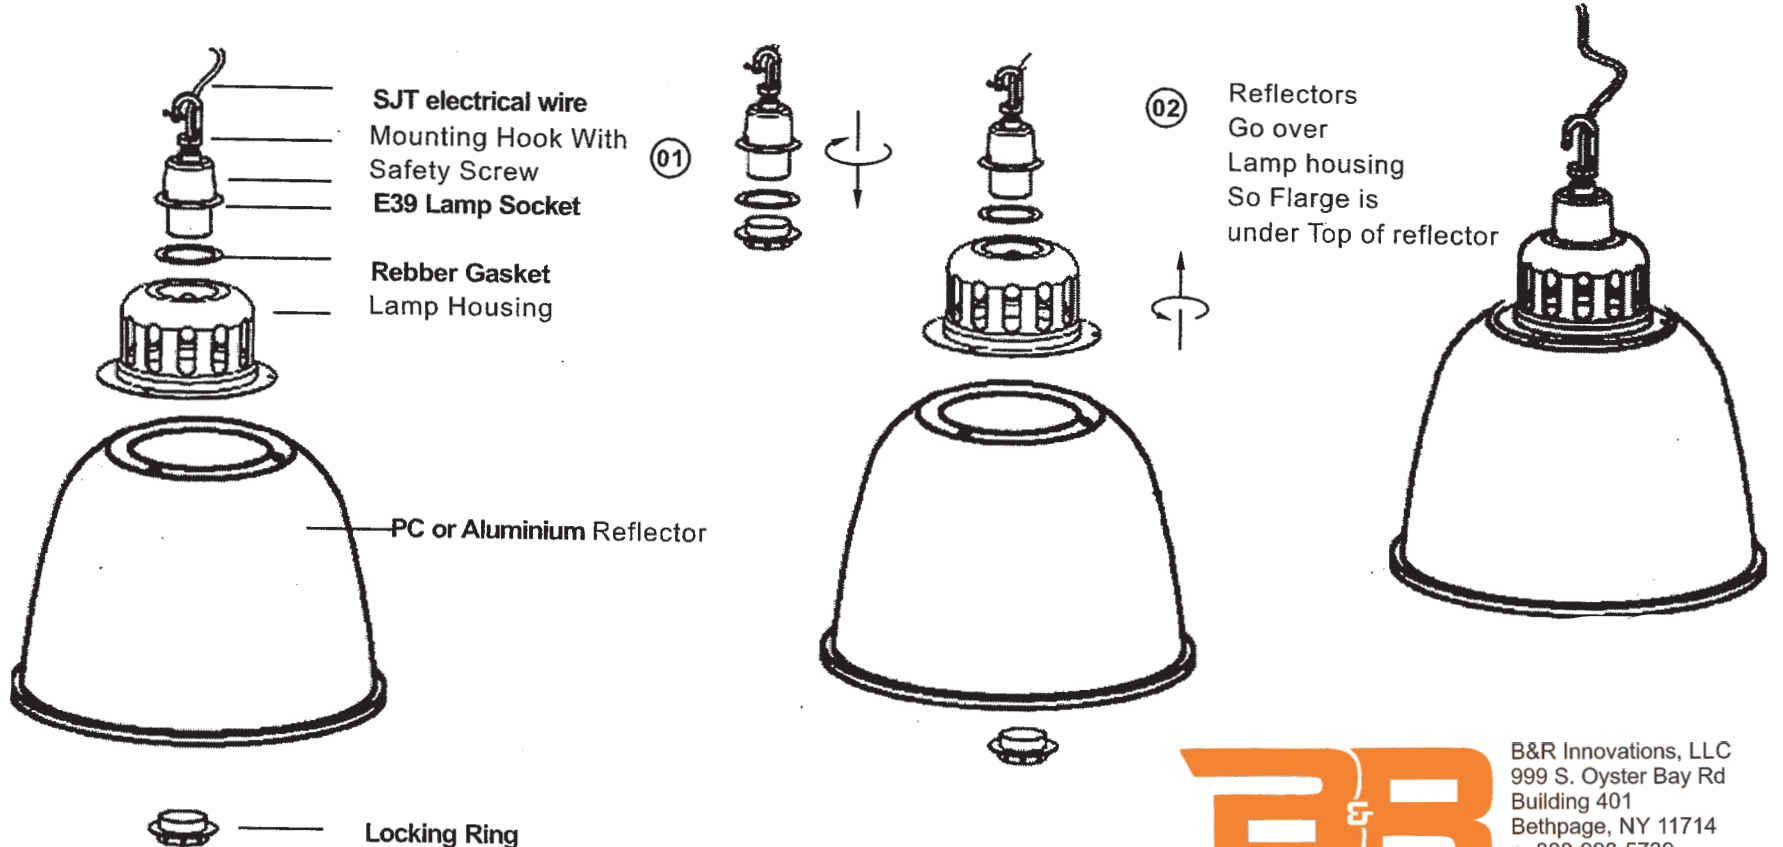

B&R Innovations, LLC
999 S. Oyster Bay Rd
Building 401
Bethpage, NY 11714
p. 888-998-5739
f. 917-677-8449
www.BandRinnovations.com
info@blockandroll.biz

Wiring Instructions

15A Straight Blade Plug

Warning: To prevent electrocution, Make sure the cable is not connected to a power source before installing a plug or connector. Failure to comply with the following instructions could cause an electrical failure or fire.



Closed



Open

Assembly

Open all the terminals by rotating the 3 levers (counter-Clockwise). Insert all the wires into the proper terminal pockets (wires to be stripped with 1/2" of strands showing). The green wire must go into the terminal with the green lever. The white wire must go into the terminal with the white lever. The black wire must go into the terminal with the black lever.

Make Certain there is no wire insulation inside any terminal, and there are no stray wire strands outside the terminals. Close the terminals by rotating the three levers clockwise.

Slide the housing over the device body. Note that the keyway in the housing and the body properly aligns the two parts. Alternately tighten the cord clamp screws to 10lbs torque. Tighten the device assembly.

