





**“ATV EXT”  
ALL TERRAIN BLOCK STACKER  
Instruction Manual**

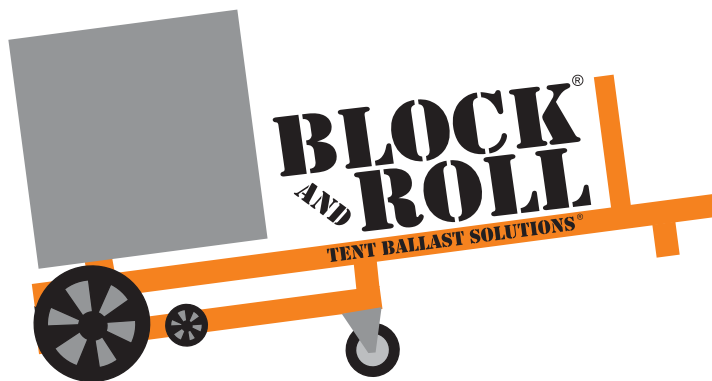

**B&R INNOVATIONS, LLC  
180 OVAL DRIVE  
ISLANDIA, NY 11749  
888-998-5739  
WWW.BLOCKANDROLL.BIZ**

For more  
Instructional  
Videos visit our  
YouTube Channel  
<http://www.youtube.com/blockandroll500>



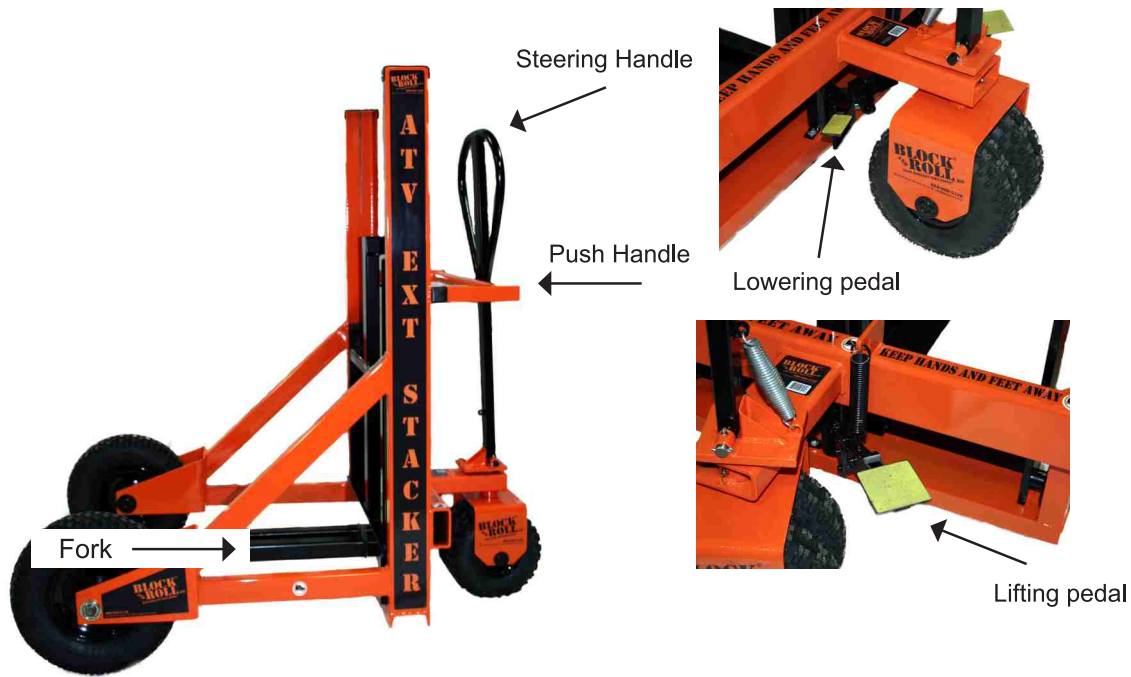

Rated for 1000lb Max Capacity

## Assembly Instructions:


### Front Wheel assembly:

Attach 2 front wheels with supplied axle, spacers and washers. Insert axle so flat end is on the side closest to the forks and end with hole is on the outer side. Use spacer on both sides of the rim and washer on outer side. Supplied quick pin will lock wheel in place. Some pressure may be needed to squeeze fenders to insert pin.




## Rear Wheel assembly:

Attach 2 rear wheels with supplied axle, spacers and washers. Use spacer on both sides of the outer wheel rims and washer on outer side. Supplied quick pin will lock wheel in place. Some pressure may be needed to squeeze fenders to insert pin. Wheels should be installed with air valves facing outwards and grease fittings facing each other.

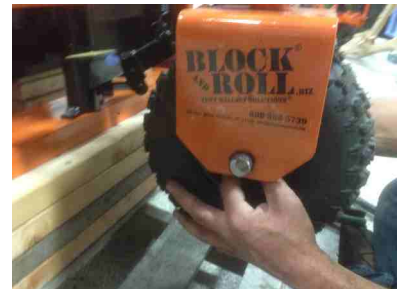

## Maintenance:

Check all wheels for wear or damage. Maintain proper Air Pressure. Grease all wheel grease fittings monthly (rear wheels must be removed to access grease fittings) and steering fittings weekly. Store unit indoors.

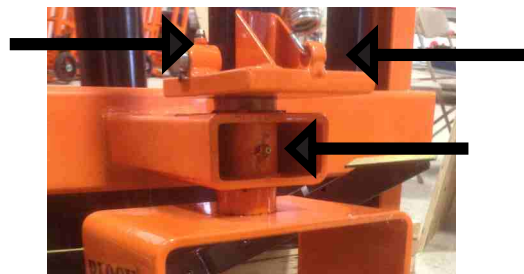

### ⚠ WARNING

Do not operate or move with unstable loads  
Do not load beyond rated capacity  
**DISTRIBUTE LOAD EVENLY**  
DO NOT SIT OR RIDE

### ⚠ ADVERTENCIA

No utilice ni moverse con cargas inestables  
No cargue más allá de la capacidad nominal  
**DISTRIBUIR carga uniformemente**  
No se siente ni viaje en el carrito

### ⚠ ADVERTISSEMENT

Ne pas conduire ou déplacer des charges instables  
Ne chargez pas au-delà de la capacité nominale  
**DISTRIBUER charge uniformément**  
Ne pas s'asseoir ni monter sur le panier



**WARNING:  
KEEP HANDS AND FEET AWAY FROM MOVING PARTS  
AND MARKED AREAS. DO NOT LIFT ON UNEVEN SURFACES.  
ALWAYS KEEP HANDS ON STEERING HANDLE OR  
PUSH HANDLE WHILE OPERATING.**

## How to Lift and move a Block (350lb - 700lb)



Insert fork into center of block



Pump right pedal until block is a few inches off the ground. (NEVER MOVE A BLOCK MORE THAN 6" OF THE GROUND)



For best results pull block using black steering handle. For steep inclines a second person can push on the block from behind.



To lower block use pedal on the left. Adjust pressure from your foot to lower slow or fast.



To stack 2 blocks, set up block to be raised behind the other block. Raise block using right pedal to clearance height, then push ATV EXT cart using orange push bar over other block. Use left pedal to lower.